



感謝您選擇我們的產品，請按照我們介紹的步驟設置您的機頂盒。


1 物品清單




- ① RCA線 (AV信號線)
- ② HDMI線
- ③ 電源
- ④ 機頂盒
- ⑤ 遙控器
- ⑥ 網線
- ⑦ *天線 (歐洲地區無)

2 外觀說明

後面板示意圖

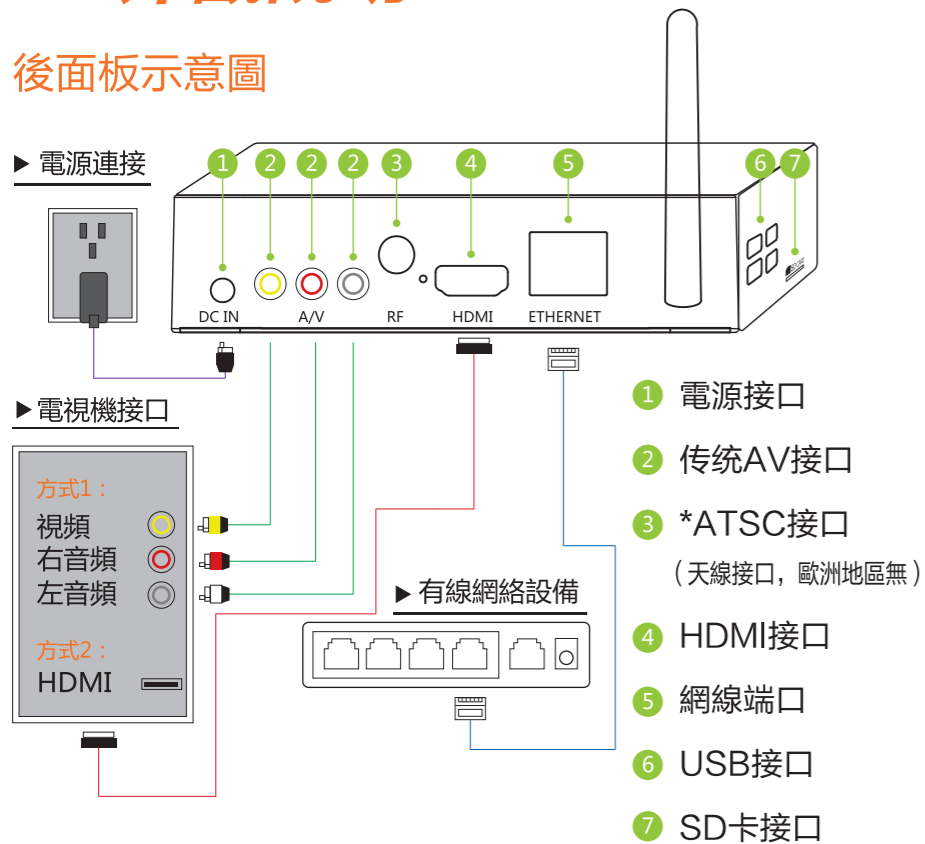

前面板示意圖

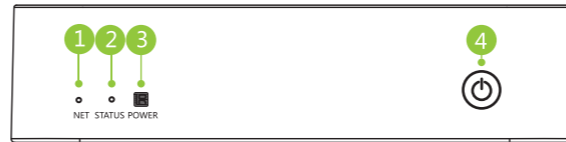

- ① NET指示燈: 網絡連接指示燈, 網絡連接後, 燈為紅色, 網斷後, 燈熄滅。
- ② STATUS指示燈: 機頂盒開啟狀態, 燈為綠色。
- ③ POWER指示燈: 機頂盒休眠, 燈為紅色。
- ④ On/Off: 開關機按鈕, 長按機頂盒將關機, 短按機頂盒將休眠。

3 網絡設置

連線就緒後, 打開電視機, 切換電視機到HDMI輸入, 按遙控器上設置鍵 "ⓘ", 進入設置界面, 如圖1。選擇 "網絡設置" 按 "OK" 鍵, 進入網絡設置嚮導頁, 設備支持有線和無線兩種網絡連接方式, 如圖2。請參考您電腦連接方式進行選擇。

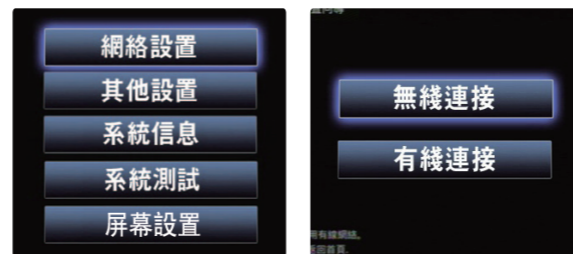


圖1

圖2

注意:

1. 當您電視機與機頂盒採用传统AV線連接時, 若電視機畫面呈現灰色, 有兩種解決方案:
 - ① 按遙控器設置鍵 "ⓘ" 進入 "系統設置", 選擇 "其他設置", 將 "電視制式" 設置為PAL或NTSC; (推薦)
 - ② 設置電視機的制式為 "Auto (自動)"。
2. 若您電視機的屏幕顯示不全或未鋪滿時, 按設置鍵 "ⓘ" 進入系統設置界面, 選擇 "屏幕設置" 進入屏幕設置界面, 請參照屏幕左側提示進行相應操作。

有線連接

機頂盒默認採用有線DHCP, 請先確認路由器和機頂盒兩端網線連接正常。

- A. 動態: 選擇 "自動獲取IP地址 (DHCP)" (推薦), 系統自動獲取網絡地址, 選擇 "保存並跳至首頁" 按 "OK" 鍵即可, 如圖3、圖4;



圖3



圖4

- B. 靜態: 選擇 "手動填寫IP地址 (靜態IP)", 輸入IP地址、子網掩碼、網關地址、DNS, 如圖5。



圖5

此處數字應與電腦設置不同, 以防IP衝突

此處地址僅供參考, 具體應用地址請查閱您個人電腦的網絡設置或聯繫網絡供應商獲取相關信息

無線連接

1. 選擇 "自動搜索", 按 "OK" 鍵, 系統自動搜索所有可用的無線網絡呈現在界面上, 如圖6、圖7;

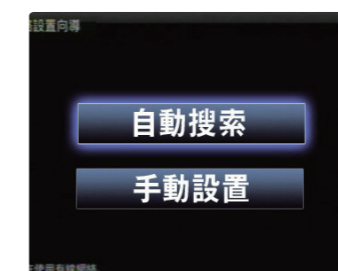


圖6



圖7



2. 選擇您的無線網絡，移動光標到密碼輸入框，按“OK”鍵彈出軟鍵盤，輸入無線密碼，按遙控器退出鍵“ESC”關閉軟鍵盤，移動光標至“保存並跳至下一步”按鈕。後續操作與有線連接方式一致，請查看有線連接A、B項操作內容。

注意：

- 當界面中未顯示您的無線網絡，請按“上翻頁”和“下翻頁”查找或按“再次搜索”按鈕重新搜索；
- 選擇軟鍵盤上的“?123”鍵，可切換為數字輸入；
- 若您的無線網絡無密碼，直接移至“保存並跳至下一步”按鈕。

4 功能簡介

機頂盒配置正確後，可以直接進入電視節目單首頁觀看節目。

播放控制說明

- 快進/快退：節目在播放過程中，按“▶、◀”鍵，播放進度條跟隨變化，按“OK”鍵跳至指定位置繼續播放；
- 播放/暫停：節目播放過程中，按“⏸”鍵可播放/暫停節目；
- 斷點續看：節目播放中斷後，可選擇從中斷的節目畫面繼續播放。

搜索說明

按上方鍵光標定位在搜索框時自動跳轉到搜索界面，按方向鍵選擇節目首字母，界面右側將顯示篩選的節目。


收藏說明

收藏的節目均存放於“個人中心”欄目，收藏方式有以下兩種：

- 在節目詳情頁上，移動光標到“收藏”按鈕，按“OK”鍵收藏節目；
- 在節目播放狀態下，按遙控器收藏夾鍵“📁”收藏節目或按菜單鍵“☰”，在彈出的菜單中選擇“收藏節目”。

5 遙控器說明

溫馨提示：使用遙控器前請確認已安裝好電池。

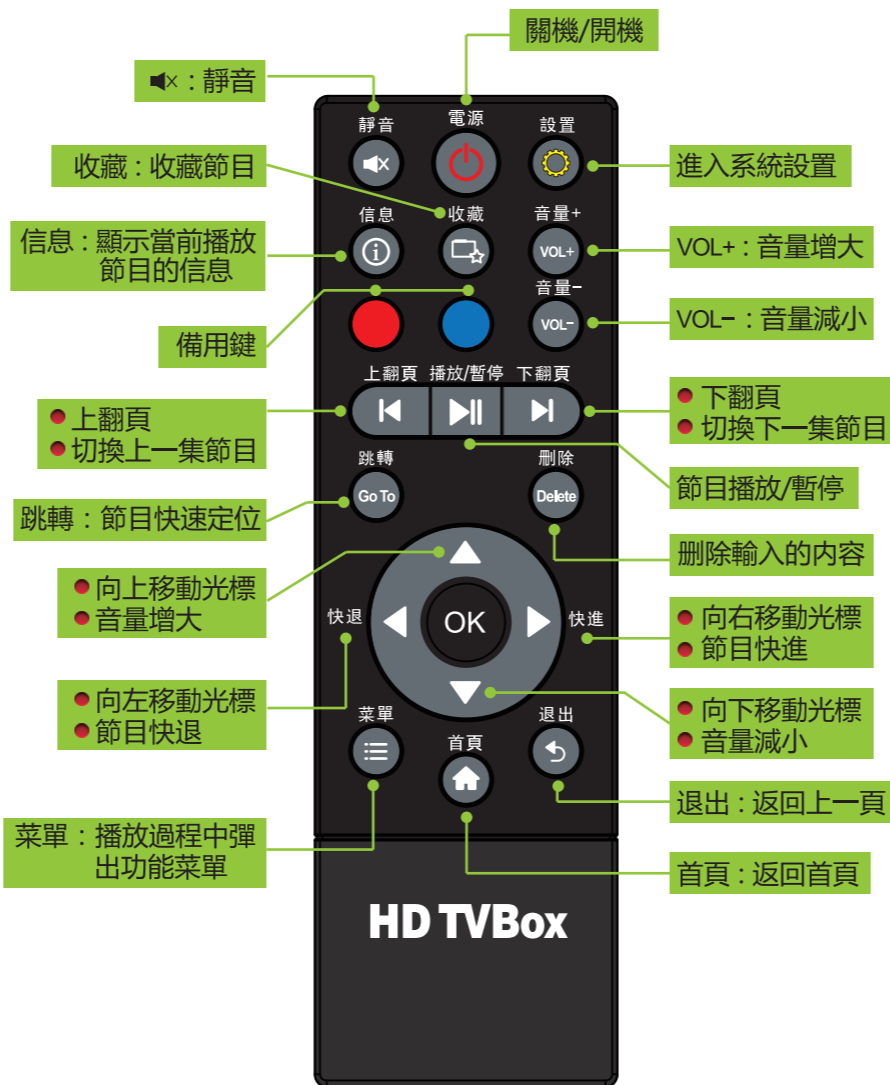

6 常見問題

問題	可能原因	解決方法
機頂盒指示燈不亮	電源插座無電	保證電源插座電壓正常
	電源線沒有接好	
網路連接被斷開	機頂盒本身網線連接不正常	重新連接網絡或更換網線
	與機頂盒相連的HUB(集線器)、modem(數據機)、交換機的網線連接不正常	重新連接網絡或更換網線
	與機頂盒相連的Hub、modem、交換機關閉	打開設備
選擇無線方式獲取不到動態IP，進不去主頁	無線網絡是否選擇自己家的	重新選擇無線網絡
	無線密碼是否輸入正確	重新輸入無線密碼
	如果使用無線網絡，無線路由器與機頂盒距離較遠，導致信號較弱	拉近無線路由器與機頂盒距離
選擇有線方式獲取不到動態IP，進不去主頁	網線已壞或者是接觸不良	檢查網線
	連接的上網設備DHCP(動態)服務是否正常工作	檢查上網設備
所有節目無聲音	音訊線連接不正確，音訊插頭不牢靠	檢查音訊線
	電視音訊設置為靜音模式	音訊改為正常模式
	電視音訊設置為最低	增加電視機音量
	電視機本身的喇叭已損壞	修復電視機喇叭
機頂盒啟動過程中，電視機上無任何圖像顯示	視頻線的連接不正確，網線的連接不正確，視頻線插頭不牢靠	檢查網線和視頻線
	機頂盒處於關機狀態	打開機頂盒
用機頂盒的遙控器進行操作時電視畫面上無響應	電視機處於關機狀態，或者沒有切換到視訊模式	打開電視機，並切換到視訊模式
	遙控器超出有效控制範圍	將遙控器靠近機頂盒，並移開遙控器與機頂盒之間的障礙物
	遙控器電池失效	更換電池
	遙控器有故障	更換遙控器
無圖像無聲音	機頂盒處於待機狀態	按遙控器待機鍵，將機頂盒從待機狀態切換到觀看狀態
有聲音沒圖像	視頻線接錯、視頻線斷路、電視機的視頻輸入埠有故障	檢查視頻線
節目聲音混音	聲道選擇錯誤	通過聲道鍵選擇正確的聲道
電視機屏幕上提示：您的機頂盒已暫停使用	您的機頂盒未開通服務或未續費，因此不能正常進入主頁觀看節目	請撥打我們的客服熱線，請客服人員為您開通機頂盒。



Thank you for choosing our product. Please follow the below steps to set up your STB.


1 Checking List



- 1 RCA Cable (AV Cable)
- 2 HDMI Cable
- 3 Power Adapter
- 4 Set-top Box
- 5 Remote Control
- 6 Network Cable
- 7 *Antenna(No in EUR)

2 Description

Picture of Back View

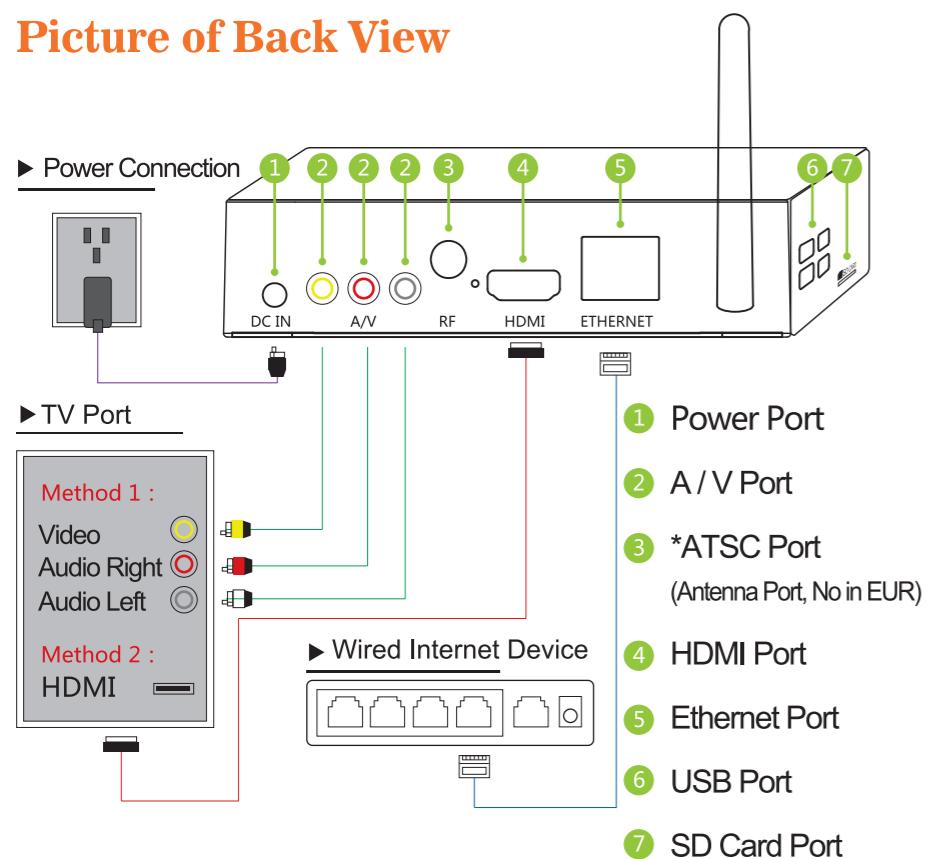

Picture of Front View



- 1 NET Indicator: The light is red when the ethernet cable is connected to the STB, and no light indicates net connection failure;
- 2 Status Indicator: The light is green when it is in normal operation;
- 3 Power Indicator: The light is red when STB is on standby;
- 4 On/Off Button: Power on/off button. Press it to power on, Hold the button to power off/reboot/standby.

3 Network Setup

After connected, turn on TV and switch TV to HDMI, then push "Setup" button "ⓘ", it will enter setup page, SEE picture 1. Choose "Network Setup" and press "OK", then enter Network Setup page. The system provides two options: wireless and wired, SEE picture 2. Please refer to your computer/mobile device wireless settings.



Picture 1 Picture 2


Note:

1. When you connect the STB and the TV set with the Traditional AV cable, there are two plans if the screen of the TV set is grey:
 - (1) Press "Setup" button "ⓘ" to enter "System Setup", choose "Other Setup", then choose PAL or NTSC in the "TV System"; (recommended)
 - (2) Setup your TV's system to be Auto.
2. When the screen of the TV set cannot be shown completely or full, press "Setup" button to enter System Setup page, choose "Screen Setup". (Once you enter "Screen Setup", there are relevant setup steps on the left screen.)


Wired Connection

The DHCP is default. Please make sure router and STB are connected correctly.

- A. Dynamic: Choose "DHCP" (recommended) and the system will assign internet addresses automatically. Then move the cursor to "Save and go to home", press "OK", SEE picture 3 and 4;

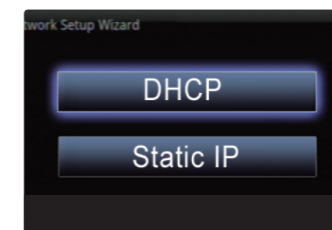


Picture 3

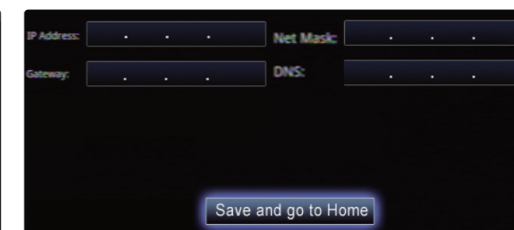

Picture 4

- B. Static IP: Choose "Static IP", enter IP, Net Mask, gateway address, DNS, SEE picture 5.

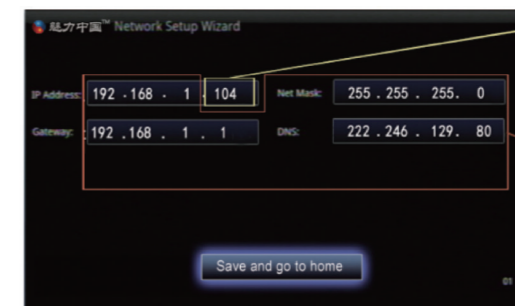


Picture 5

To avoid IP address conflict, this one should be different with the one on the PC.


These addresses are for references. Please refer to your own PC for your unique address, or contact your ISP to obtain related info.

Wireless Connection

- 1. Choose "Automatic" and press "OK", the system will search and list existing wireless networks that it is within, SEE picture 6 and 7;

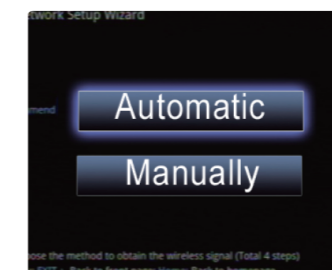

Picture 6

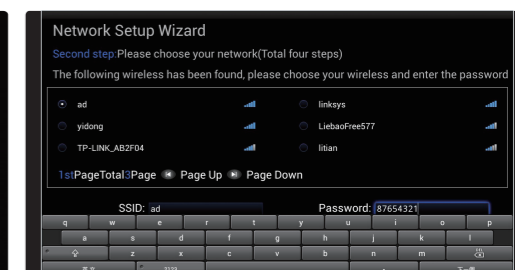

Picture 7



2. Choose your wireless name (SSID) among the available SSIDs, then move the cursor to password, press "OK" to bring up Soft Keyboard, enter correct password, press "Enter" to finish, then move the cursor to "Save and Next", the following procedure is the same as wired connection, please SEE step A and B of wired connection.

Note:

1. If you don't see your SSID, please press "Page Up" or "Page Down" to find it; or press "Search Again" to start a new search;
2. Choose "?123" icon on Soft Keyboard, it can switch to number input;
3. If your wireless network has no password, then move the cursor directly to "Save and Next" button, then press "OK".

4 Brief Introduction of Functions

Once it is set up correctly, you can enter IPTV service.

Play control

- Fast forward or rewind: while playing a program, press "Left Arrow" or "Right Arrow" button, progress bar will move accordingly, then press "OK", the program will continue to play at the designated time;
- Play/Pause: while playing, press "Play/Pause" to play/pause the program;
- Continue Viewing: Play the program from where you previously stopped watching.

Search

Move the cursor to the search area, then it will show a search interface, then input the first letter of each character in the title of your desired program, and the right interface will show you matched programs.

Favorite


(All the saved programs are listed in "个人中心")

Approach No.1: At program detailed info page, move cursor to "收藏", and press "OK";

Approach No.2: While playing, press "Info", or press "Menu", choose "收藏節目" from the shown menu.

5 Remote Control Description

Tips: Please make sure your remote control has put battery in.

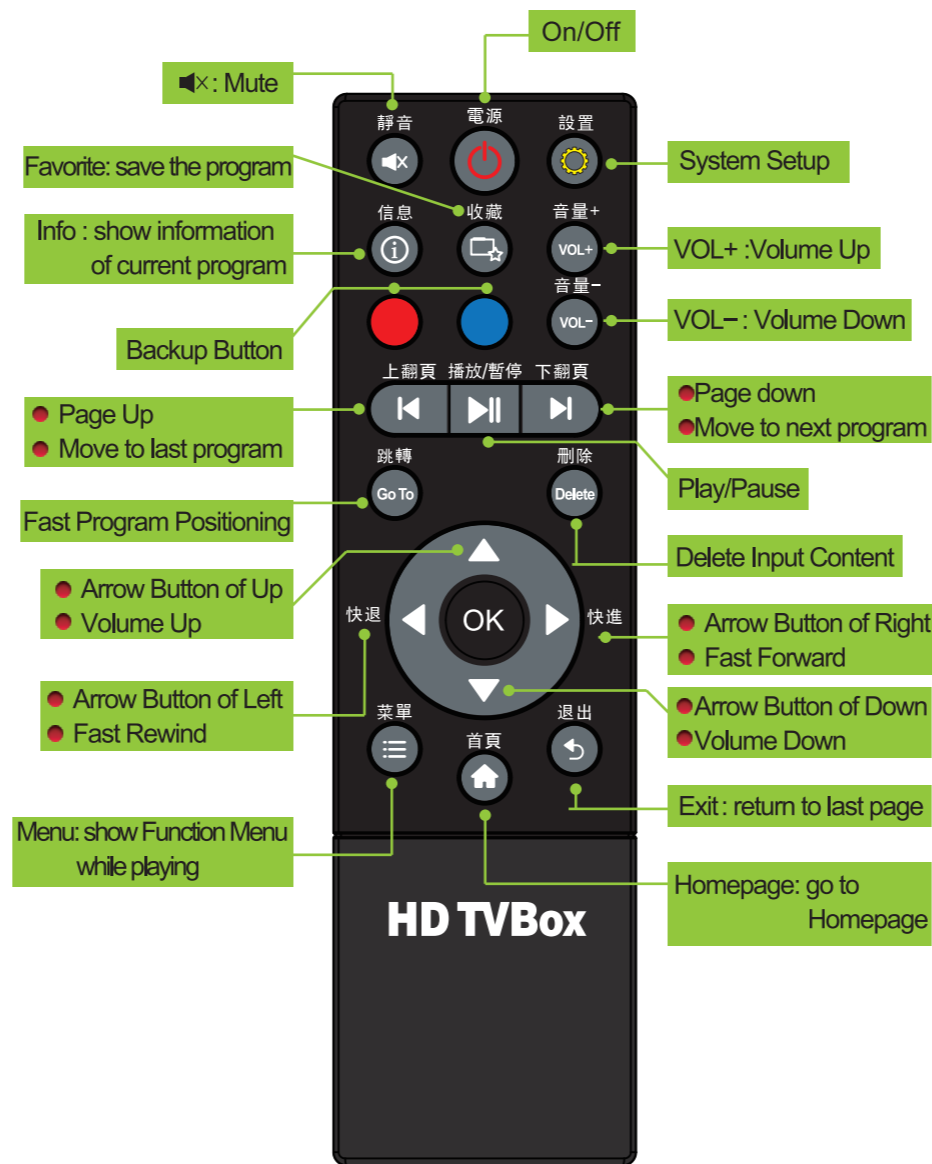

6 Frequently Asked Questions

Problem	Reason	Solution
The indicator is off	No electricity goes through the power outlet	Ensure the voltage of the power outlet is OK
	The power line is not connected well	Connect the power line correctly
The network connection is off	The network cable of the STB is not connected well	Connect the network cable again or change the network cable
	The connections of the HUB, modem or the network cable of the switch with the STB are not well	Connect the network again or change the network cable
	The HUB, modem or switch connected to the STB are power off	Power on the equipments
Can't get dynamic IP for wireless network. Can't enter the home page	Make sure to select your own wireless network	Select wireless network again
	Make sure the password is correct	Enter the password again
Can't get dynamic IP for wired network. Can't enter the home page	The wire connection is not working or faulty	Check the net wire
	The DHCP server is not working	Check the internet device
No sound for all programs	The audio cable is not connected properly, or the audio plug is insecure	Check audio cable
	The TV set is configured mute	Convert the audio mode to be normal
	The volume of the TV set is set minimum	Increase the volume
	The amplifier of the TV set is broken	Repair the amplifier
During the process of starting the STB, no picture on the screen	The video cable or the network cable is not connected properly, or the video plug is insecure	Check network cable and video cable
	The STB is power off	Power on the STB
	The TV set is power off, or the TV set is not switched to AV mode	Power on the STB and switch to AV mode
No respond when use the remote of the STB	The remote is out of the effective area	Get the remote closer to the STB, and remove the obstacles between the STB and the remote
	The battery of the remote is out of use	Change new battery
	The remote is broken	Change the remote
No sound and picture	The STB is standby	Press the "Standby" key
With sound and no picture	The video cable is not connected properly; the circuit of the video cable is broken; or the video input port of the TV set is broken	Check the video cable
Mixed sound in programs	The audio channel is selected improperly	Select the proper audio channel
Prompt: Your STB is suspended	Your STB isn't activated or renewed, so you can't enter the home page to watch programs	Please call our customer service hotline and ask for activation